



## CLUTCH RELEASE, SERIES IIA

Ref #	Description	Qty	Part #
1	Clutch Withdrawal Sleeve	1	6312
2	Bush for Cross Shaft, small	1	*NLA
3	Oil Seal	1	200
4	Withdrawal Thrust Bearing	1	285
5	Bush for Withdrawal race sleeve	1	*NLA 499
6	Joint washer, Suffix "A"	1	*NLA 450
6	Joint washer, Suffix "B" on	1	*NLA 280
7	Bush for Cross shaft, large	1	*NLA
8	Joint washer	1	835
not shown	Boot - Cross Shaft	1	6368

## CLUTCH RELEASE, SERIES III

Ref #	Description	Qty	Part #
1	Throw out Bearing	1	7089
2	Fixing staple		
	(should be changed w/bearing)	1	7084
3	Pivot Pin for Clutch Release	1	3779
4	Slave Cylinder Push Rod clip	1	3753
5	Slave Cylinder Push Rod	1	2897
6	Slave Cylinder	1	6751
→	<b>SLAVE CYLINDER REBUILDING KIT</b>	<b>KIT</b>	<b>1957</b>

\*NLA = No longer available.